

MOUNTING INSTRUCTIONS

REAR VALANCE

PACKAGE CONTENT

- ① REAR VALANCE
- ② WASHER
- ③ SELF DRILLING SCREW

QUANTITY

- 1
- 8 **If with screws**
- 8 **If with screws**

①



1-Remove the original rear diffuser on the product.(Image 1)

②




③




2-First, remove the gelatin on the product, then align the product as you see in the image and put it in place.(Image 2 and 3)

4

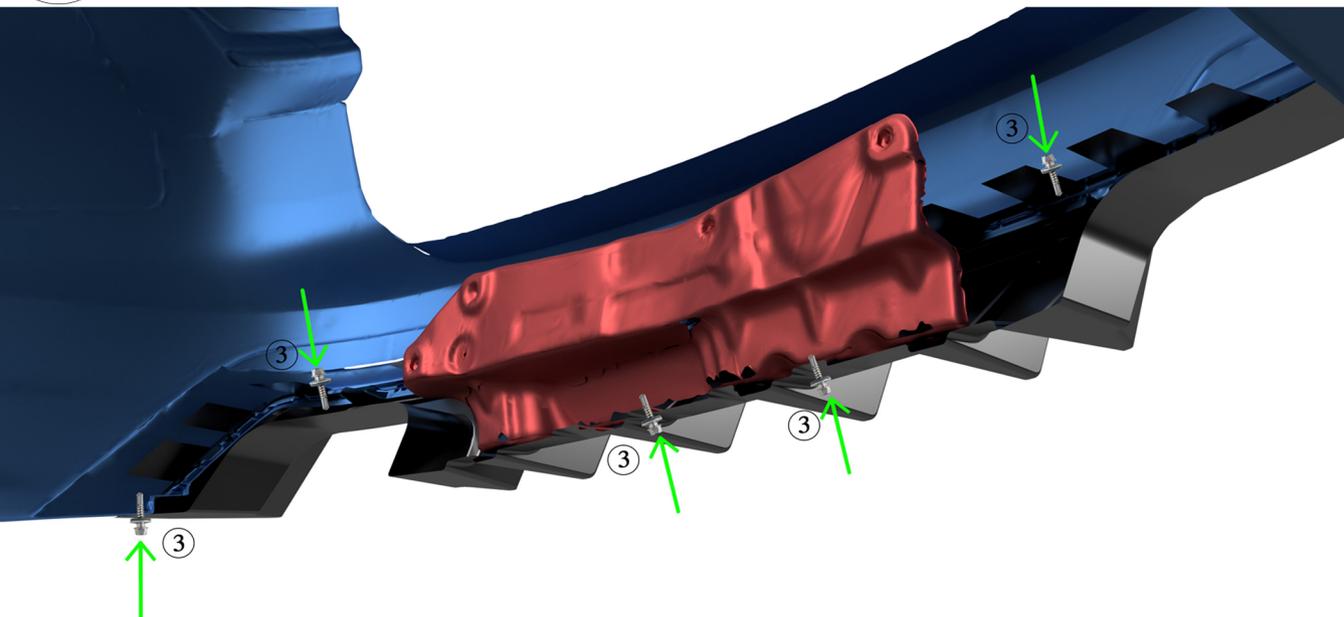

5

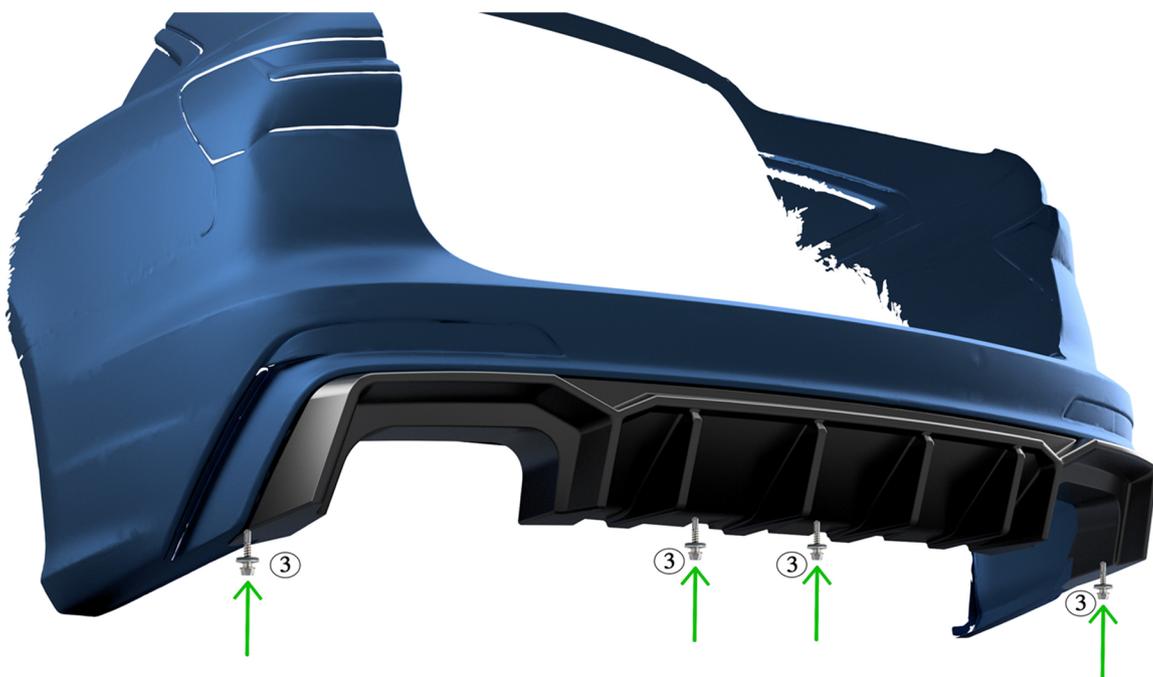

3- Mount with smart screws at the places indicated by the arrow in the picture. (Image 4 and 5)

Important Note : Clean the surface with primer first. Peel of the protective on 3M Tape and stick it if the rear valance has 3M Tape.No screws needed